

**! BEFORE YOU BEGIN, PLEASE READ THE HELPFUL TIPS AND WARNINGS AT THE END OF THIS DOCUMENT**



## MULTI-STRING TUNING:

- 1 PUSH "ON" TO TURN ON SYSTEM.
- 2 STRUM ALL OPEN STRINGS. STRING LED COLORS INDICATE TUNING STATUS (SEE "LED LEGEND").
- 3 WAIT 5 TO 10 SECONDS. IF SOME LEDS ARE NOT GREEN, MUTE ALL OTHER STRINGS, THEN PICK THE STRINGS WHOSE LEDS ARE RED.
- 4 REPEAT STEP 3 IF NECESSARY. SYSTEM WILL TURN OFF WHEN ALL STRINGS ARE IN TUNE.

## CHANGE TUNING FROM STANDARD E TO E<sup>b</sup> (EXAMPLE):

- 1 PUSH "ON" TO TURN ON SYSTEM.
- 2 PUSH "ON" AGAIN TO ENTER MAIN MENU.
- 3 PUSH "LEFT" UNTIL "B" IS SELECTED. ("B" TUNES ONE SEMITONE FLAT. SEE "TUNING OVERVIEW").
- 4 PUSH "ENTER" TO START THE TUNING PROCESS. MAKE SURE YOUR FINGERS ARE CLEAR OF THE STRINGS AND KEYS.
- 5 WHEN KEYS STOP TURNING, STRUM ALL OPEN STRINGS.
- 6 WAIT 5 TO 10 SECONDS. IF SOME LEDS ARE NOT GREEN, MUTE ALL OTHER STRINGS AND PICK THE STRINGS WHOSE LEDS ARE RED.
- 7 REPEAT IF STEP 6 IF NECESSARY. SYSTEM WILL TURN OFF WHEN STRINGS ARE IN TUNE.

## SINGLE-STRING TUNING:

- 1 PUSH AND HOLD "ON" TO TURN ON SYSTEM.
- 2 PICK EACH STRING WHOSE LED IS RED AND WAIT UNTIL ITS LED TURNS GREEN.
- 3 MUTE STRINGS THAT ARE TUNED AND REPEAT STEP 2 UNTIL EACH STRING'S LED IS GREEN.
- 4 SYSTEM WILL TURN OFF WHEN ALL STRINGS ARE TUNED.

Download the complete Operations Manual at: [www.Epiphone.com](http://www.Epiphone.com)

## TUNING OVERVIEW:

### THE RED BANK

	E <sup>6th</sup>	A <sup>5th</sup>	D <sup>4th</sup>	G <sup>3rd</sup>	B <sup>2nd</sup>	e <sup>1st</sup>	
<b>E</b>	"STANDARD"	E2	A2	D3	G3	B3	E4
<b>A</b>	"DADGAD"	D2	A2	D3	G3	A3	D4
<b>D</b>	"LOW D"	D2	G2	C3	F3	A3	D4
<b>G</b>	"DROP-D"	D2	A2	D3	G3	B3	E4
<b>B</b>	"E <sup>b</sup> "	E <sup>b</sup> 2	A <sup>b</sup> 2	D <sup>b</sup> 3	G <sup>b</sup> 3	B <sup>b</sup> 3	E <sup>b</sup> 4
<b>e</b>	"DOUBLE DROP-D"	D2	A2	D3	G3	B3	D4

### THE GREEN BANK

	E <sup>6th</sup>	A <sup>5th</sup>	D <sup>4th</sup>	G <sup>3rd</sup>	B <sup>2nd</sup>	e <sup>1st</sup>	
<b>E</b>	"OPEN E"	E2	B2	E3	G <sup>#</sup> 3	B3	E4
<b>A</b>	"OPEN A"	E2	A2	E3	A3	C <sup>#</sup> 4	E4
<b>D</b>	"OPEN D"	D2	A2	D3	F <sup>#</sup> 3	A3	D4
<b>G</b>	"OPEN G"	D2	G2	D3	G3	B3	D4
<b>B</b>	"DOBRO"	G2	B2	D3	G3	B3	D4
<b>e</b>	"ALL 4 <sup>TH</sup> "	E2	A2	D3	G3	C4	F4

### i THE BLUE BANK IS USER-DEFINED

E <sup>6th</sup>	A <sup>5th</sup>	D <sup>4th</sup>	G <sup>3rd</sup>	B <sup>2nd</sup>	e <sup>1st</sup>
------------------	------------------	------------------	------------------	------------------	------------------

## LED LEGEND

### LED LEGEND FOR TUNING PROCESS (e-E)

- : STRING IN TUNE
- : STRING NOT IN TUNE (PICK STRING)
- : FREQUENCY OUT OF PITCH WINDOW
- : RESPECTIVE ROBOHEAD IS IN MOVEMENT
- : FREQUENCY MEASUREMENT IN PROGRESS
- : INTERFERENCE BETWEEN LOWER AND HIGHER STRINGS
- ⓘ MUTE LOWER STRINGS THAT ARE IN TUNE AND STRUM HIGHER STRINGS AGAIN.

### LED LEGEND (BATTERY)

- : BATTERY IS FULLY CHARGED
- : BATTERY IS LOW
- : BATTERY IS EMPTY

Download the complete Operations Manual at:  
[www.Epiphone.com](http://www.Epiphone.com)

**! DOWNLOAD THE COMPLETE MANUAL FOR DETAILED INSTRUCTIONS AND IMPORTANT SAFETY INFORMATION » <http://www.Gibson.com/Min-ETune>**

**! THE BASS SIDE ROBOHEADS TURN CLOCKWISE TO RAISE STRING PITCH AND ANTICLOCKWISE TO LOWER STRING PITCH.**

**! DO NOT USE ANY STRING WINDING TOOLS AS THEY MAY CAUSE DAMAGE TO THE ROBOTIC TUNING PEGS.**

**! CHARGE BATTERY WITH THE SUPPLIED CHARGER. BATTERY IS FULLY CHARGED WHEN THE CHARGER'S LED IS GREEN.**

